


Floor-standing boilers (solid fuel)

20DLO BOBOR/BEAVER

00 - General view

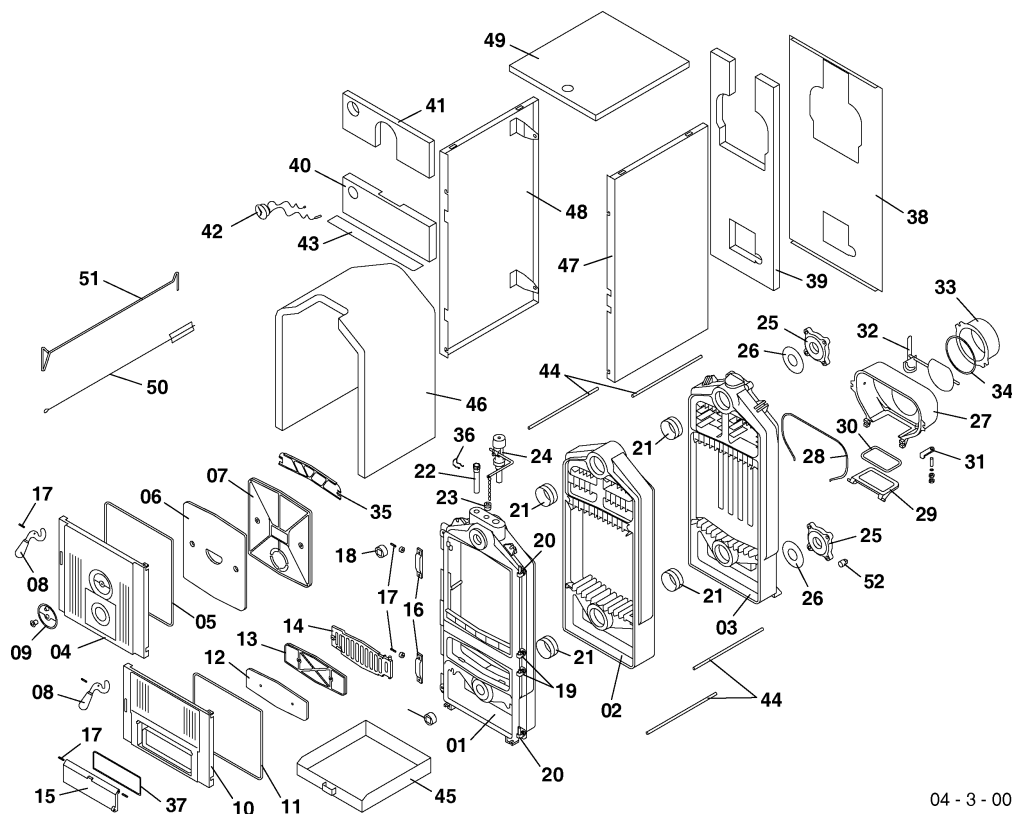

04 - 3 - 00 - 01.02

Floor-standing boilers (solid fuel)

20DLO BOBOR/BEAVER

00 - General view

Pos.	Article	Description	Note
01	0020053410	exchanger - section, front	
02	0020053411	exchanger - section, middle	
03	0020053412	exchanger - section, back	
04	0020053413	Combustion chamber, door	
05	0020053414	Insulation, cord Combustion chamber	
06	0020053415	Insulation, Combustion chamber door	
07	0020053416	Cover plate, Combustion chamber	
08	0020053417	Hook, door	
09	0020053418	Collar, air	
10	0020053419	Ash pan, door	
11	0020053420	Insulation, cord Ash pan	
12	0020053421	Insulation, door Ash pan	
13	0020053422	Cover plate, Ash pan	
14	0020053423	Grille, Ash pan	
15	0020053424	Flap, Air attitude	
16	0020053425	Hinge, door	
17	0020053426	Cheese head screw (x5)	
18	0020053427	Plug	
19	0020053428	Hinge, down	
20	0020053429	Hinge, middle	
21	0020053431	Nipple	
22	0020053432	Thermostat, Bulb	
23	0020053433	Valve, Thermocouple	
24	0020053434	Thermostat, Regulator	
25	0020053435	Flange	
26	0020053436	Seal	
27	0020053437	Adaptor, Chimney	
28	0020053438	Insulation, cord Adaptor	
29	0020053439	Flap, Cleaning door	
30	0020053440	Isulation, Cleaning door	
31	0020053441	Catch, Cleaning door	
32	0020053442	Flap, Chimney	

Floor-standing boilers (solid fuel)

20DLO BOBOR/BEAVER

00 - General view

Pos.	Article	Description	Note
33	0020053443	Flue adaptor, Chimney 130	20DLO BOBOR/BEAVER
34	0020053444	Insulation, cord Flue adaptor	
35	0020053445	Blank, cleaning plate front	
36	0020053446	Clip, Thermostat Bulb	
37	0020053447	Insulation, Flap Air attitude	
38	0020053448	Back panel	
39	0020053449	Insulation, back panel	
40	0020053450	Casing front	
41	0020053451	Insulation, Casing front	
42	0020053452	Thermometer	
43	0020053453	Blank, Protection	
44	0020053454	Anchor rod, 20DLO	20DLO BOBOR/BEAVER
45	0020053459	Ash pan, 20DLO	20DLO BOBOR/BEAVER
46	0020053464	Insulation, Cast metal heat 20DLO	20DLO BOBOR/BEAVER
47	0020053469	Casing, Side Cover right 20DLO	20DLO BOBOR/BEAVER
48	0020053474	Casing, Side Cover left 20DLO	20DLO BOBOR/BEAVER
49	0020053479	Cover, top casing 20DLO	20DLO BOBOR/BEAVER
50	0020053484	Flueway brush, 20-30DLO	20DLO BOBOR/BEAVER
51	0020053487	Hook, 20-30DLO Ash pan	20DLO BOBOR/BEAVER
52	0020061862	Spacer, Stopper 1/2	